
X

Cal. 5020.B



English User's Manual

Battery type: 395 (diameter 9.5mm x 2.6mm / SR 927 SW) Accuracy: ± 20 / ± 10 seconds per month

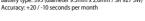



Push-button B


Start: Press push-button A.


(Start / Stop / Reset)

Stop: to stop the timing, press pushbutton A once more and read the 3 chronograph counters: 4h/20 min/38 sec

Chronograph: Basic function

Zero positioning:
 Press push-button B.
 (The 3 chronograph hands will be reset to their zero positions).

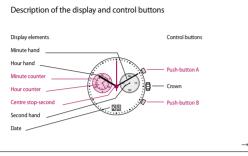

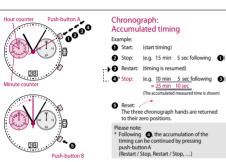




(start timing) 2 Stop: (e.g. 15 min 5 sec following 1) - Restart: (timing is resumed)

osec easured time is shown)

to theil zero positions described by the accumulation of the timing can be continued by pressing push-button A (Restart / Stop, Restart / Stop, ...)

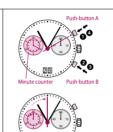

Chronograph: Intermediate or interval timing

 Start: (start timing) Display interval:
 e.g. 10 minutes 10 seconds continues in the background)

Please note:

Following further intervals or inter mediates can be displayed by pressing push-button B (display interval / make up measured time, ...)

Center stop-second

Adjusting the chronograph hands to zero position

Example:
One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change). III (all 3

Pull out the crown to position III (all a chronograph hands are in their correct or incorrect zero position).

Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the centre stop-second rotates by 360° → corrective mode is activated).



Adjusting the centre stop second Single step A 1 x short Continuous A long Adjusting the next hand B Adjusting the minute counter hand and the hour counter hand (mechanical coupled)

Single step A 1 x short Continuous A long



 Returning the crown to position | | Termination of the chronograph hands adjustment (can be carried out at any time).



Setting the time

Pull out the crown to position III
 (the watch stops).

2 Turn the crown until you reach the correct time 8:45.

3* Push the crown back into position I.



Setting the date (quick mode)

Pull out the crown to position II (the watch continues to run).


Turn the crown until the correct date appears.

Push the crown back into position

01

Please note: During the date changing phase between 9 PM and 12 PM; the date must be set to the date of the following day.

An extreme acceleration in setting the date with quick mode can induce a false date indi cation. The synchronization is re-established by setting the date from 01 till 31 (crown in position III).

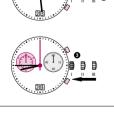

Setting the date/time

Pull out the crown to position (the watch continues to run)

2 Turn the crown until yesterday's date appears 3



3* Pull out the crown to position III (the watch stops).


Continue to turn the crown until the correct time 8:30 PM appears.

Push the crown back into position

Please note:

* To set your watch to the exact second, please refer to the chapter entitled *setting the times.

** Please observe the AM/PM clock rhythm.

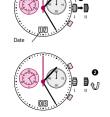

Example:
- Date / time on the watch:
- Present date / time:

177 / 1:25 AM
4 / 8:30 PM